 





FORD TRUCKS

4x2 F-MAX Diesel

Production Start: 2025

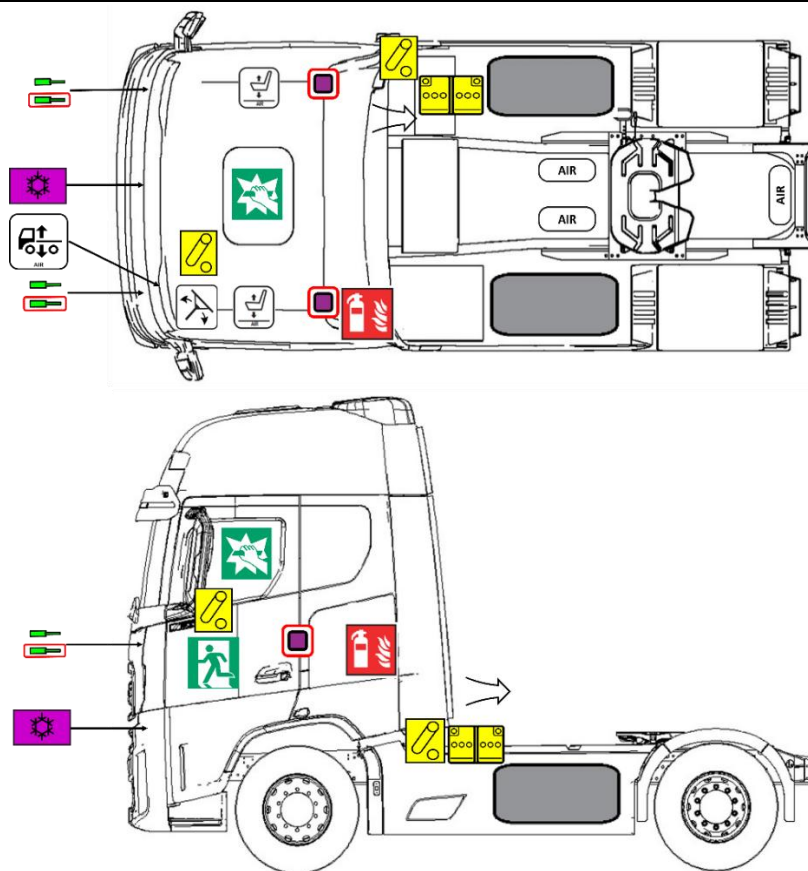

Battery low voltage



Air tank



Steering wheel,
tilt control



Seat height
adjustment by
air system



Air intake



Seat belt
pretensioner



Gas strut / Preloaded
spring



Device to shut down
power in vehicle



Fuel tank
content Diesel



Air-conditioning
component



Break to
obtain access



Emergency
exit



Fire extinguisher



Height control truck, by air
system

FORD 4x2 F-MAX Diesel

Identification Number

FO_2025_625_001


Version Number

01


Page Number

1/4

1. Identification / Recognition

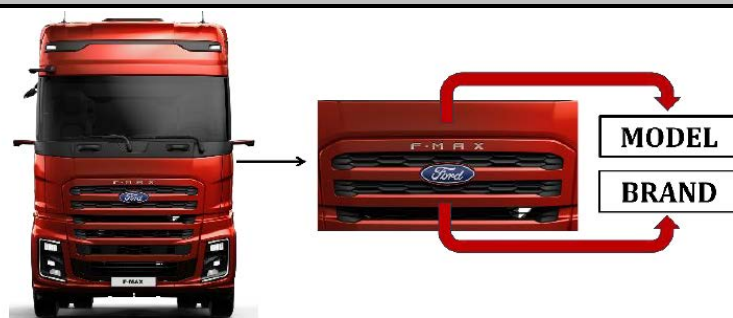

2. Immobilization / stabilization / lifting

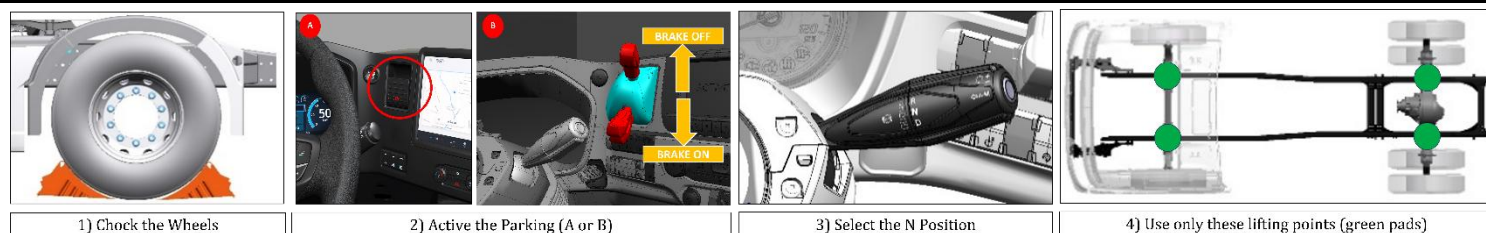

3. Disable direct hazards / Safety regulations



For trucks with starter key

(1): If possible, turn off the starter switch and remove the key.


For trucks with start/stop button
Short press the button.

For trucks with ADR: Press the battery main switch (2). Turn the battery main switch (3) or (4) to OFF position.

Note: For trucks with ADR, the main switch is a physical power cut-off. The main switch opens the ADR relays to disconnect the 12 V batteries.



The location of the battery box is the same in F-MAX vehicles. Its location does not change. The pictures show the standard positioning (A). The battery main switch should be used to turn off the voltage in the vehicle.

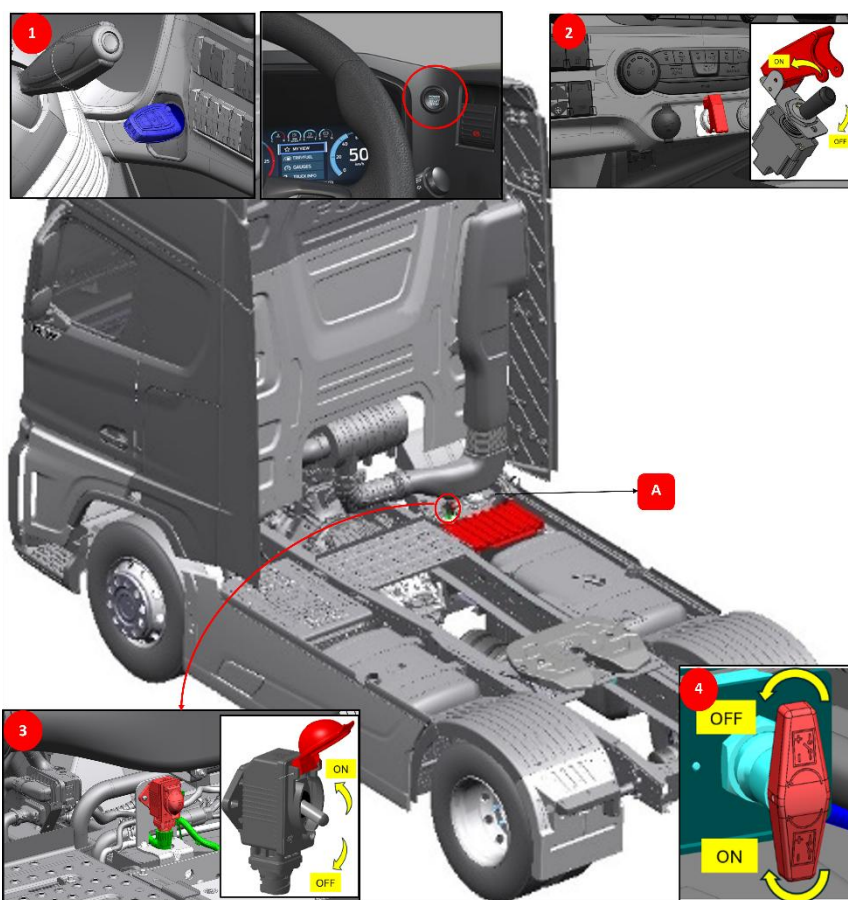

FORD 4x2 F-MAX Diesel

Identification Number

FO_2025_625_001

Version Number

01

Page Number

2/4

4. Access to the occupants

1. Through driver or passenger door
2. Break through the side window

A : Laminated Glass

B: Tempered Glass



5. Stored energy / liquids/ gases/ solids

| | | |
|--|--|---------------|
| | | 12V + 12V |
| | | 600 L + 250 L |
| | | 730 g |
| | | 85 L |

6. In case of fire



7. In case of submersion



FORD 4x2 F-MAX Diesel

Identification Number

FO_2025_625_001

Version Number

01

Page Number

3/4

8. Towing/ transportation/ storage

1. The towing eye fastening point is located under the front bumper



2. Shut down the power of the vehicle (See section 3. Disable direct hazards / safety regulations).




3. Keep away from inflammable and explosive materials.

Allowed Methods:


1. Towing. **(Note: Use only front towing eye for towing the vehicle with all wheels on the ground).**

2. The driver to the wheels is disabled by either uncoupling the propeller shaft (1) from the driven axle (2) or by removing the drive shafts (3).

3. Transporting

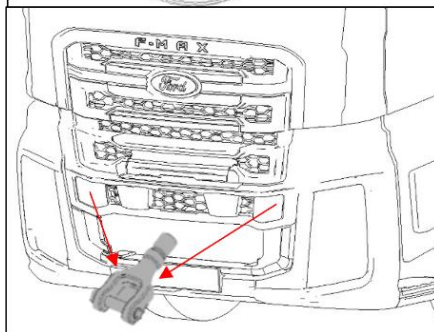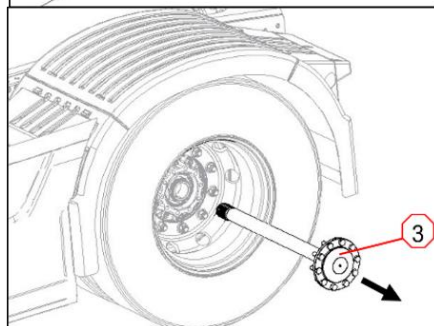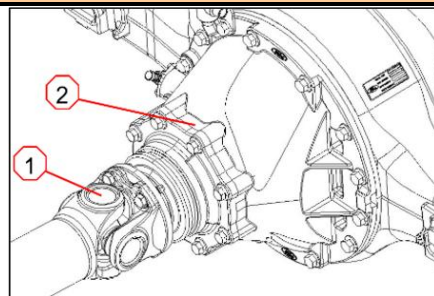











9. Important additional information

 Do not perform any operation on a damaged truck without an appropriate Personal Protective Equipment (PPE).

See driver's manual or rescue and towing manual for more detailed information.

10. Explanation Pictograms Used

| | | | |
|--|-------------------------------|---|---------------------------------------|
|  | Hazardous to the human health |  | Irritants |
|  | Corrosives |  | Gases under pressure |
|  | Explosive |  | Use ABC powder to extinguish the fire |
|  | Environmental hazard |  | Warning, Electricity |
|  | Flammable |  | General warning sign |
| FORD 4x2 F-MAX Diesel | | Identification Number FO_2025_625_001 | Version Number 01 |
| | | | Page Number 4/4 |